

How to use the washing machine and the dryer at Damager Kollegiet

1. Changing language

You have to **do it twice**: Once for the touch display on top of the machine and once for the control panel.

Touch display:

Just touch the little world-symbol in the lower right corner til your most suitable language is shown.



Control panel:

Rotate the button til "indstillinger" is highlighted. Press the button.



Rotate the button til "Sprog" is highlighted. Press the button.



Rotate the button til a suitable language is highlighted. Press the button to confirm and go to "back". Now your menu is e.g. in English.



2. Choosing washing programme

Click "Programme selection" to choose a programme or click one of the 4 default programmes.



By rotating the button you can change the temperature and the rotation speed. Just turn the button til the part you want to change is highlighted, press the button and turn the button to adjust e.g. the temperature, then press the button again to confirm.



3. Choosing washing powder/ fabric softener and buying

After you loaded the machine and chose your washing program, insert your washing card. Choose which washing powder should be used (white or colored) and whether fabric softener should be used. Then click “buy” and press the blinking start-button



4. Using the dryer

Big ones are dryers, smaller ones are washing machine 😊

The dryers are bigger, but that doesn't mean that they should be filled double what you put in the washing machine. They need space to shake the clothes around, so just one washing machine load in 1 dryer.

Before using the dryer clean the lint filter (you find it by opening the red-marked part → just take the lint out and brush it with the brush at the dust bin)



You can also hang your clothes in the **dryer room** next to the laundry room (Tørrerum).